


REMOTE CONTROL


SUBSCRIPTION/ ASSOCIATION / ACTIVATION AND USE

To activate Remote Control for your vehicle, please follow this guide.

1. Ensure you have a valid MyDS account and that your VIN has been added to your account. If you haven't yet installed the mobile app on your smartphone, you can easily do so by downloading the app from Google Play Store or Apple App Store.

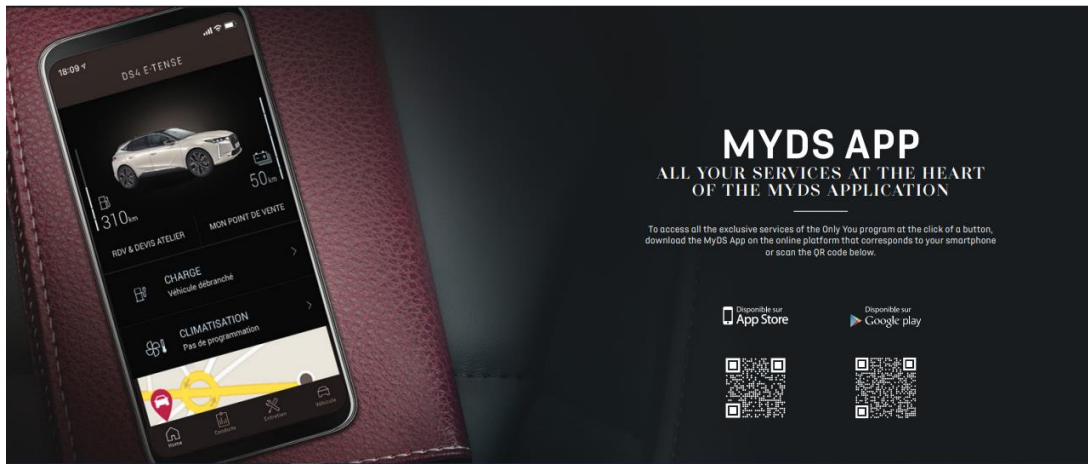


2. Log into your MyDS, click on the vehicle icon on the bottom right and visit the Services store section. Select “Discover” and click on “Remote Control”. Tap on “START ACTIVATION” and follow the steps to activate your new service.

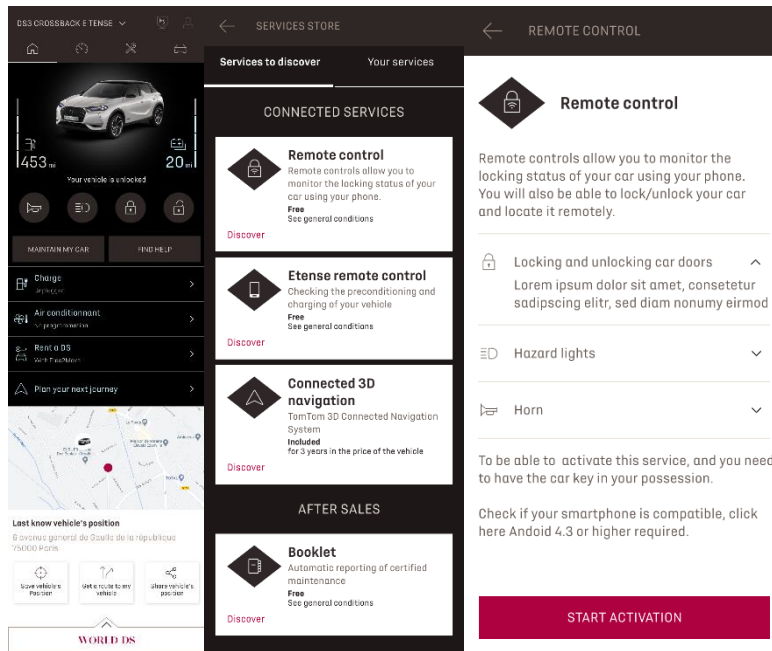

You will be redirected on the Service Activation page, where you will find information and benefits of the Remote control features. Click on “GET” to continue the activation process.

Please make sure that you have read and accepted the General Terms and Conditions by ticking the acceptance box. Then START the process

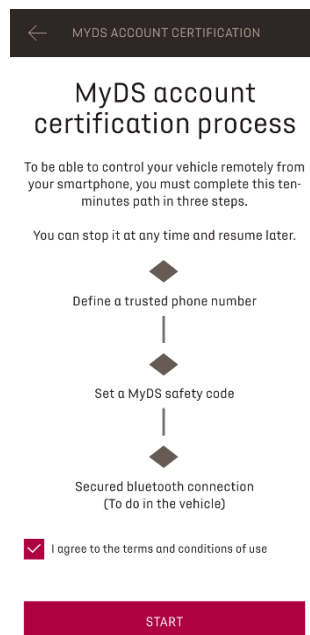


You can now define and save your preferences. There are three steps to complete and the process should take around 10 minutes.

Step 1: Enter your phone number and enter the 6-digit code that you should have received via SMS

The image displays a four-step mobile app interface for defining a trusted phone number. The first screen features a 'START' button. The second screen prompts the user to enter their country and phone number. The third screen shows a received code '1234' and a 'Re-send me the code' link. The fourth screen shows a numeric keypad and a 'CONTINUE' button. The final screen shows a confirmation message: 'Your trusted phone number is defined!' with a 'CONTINUE' button.

Step 2 : Create your personal 4-digit Security Code.

You will first receive a 9-digit code via SMS. Enter this code in the app. That will allow you to then create your own security code (4-digit). With this code you will be able to access your vehicle remotely and to use all the Remote Control features.

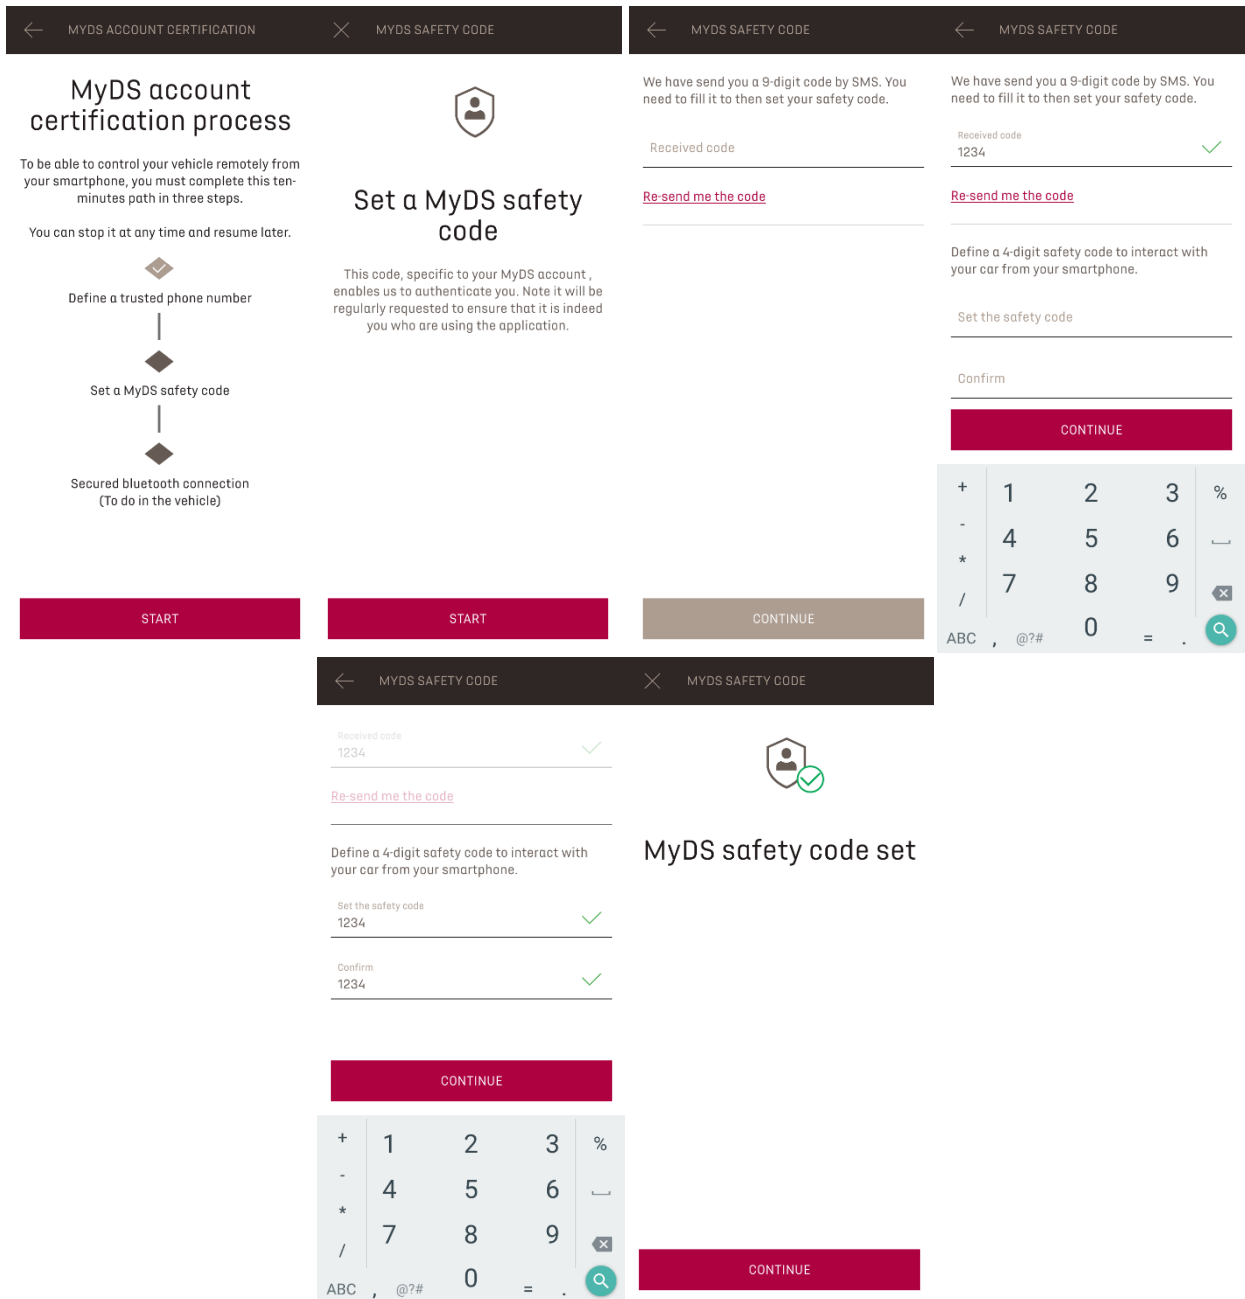

Step 3: Connect your mobile phone to your vehicle using Bluetooth.

You must be in your vehicle to complete this step.

Switch on your vehicle engine and activate the Bluetooth function on your mobile phone.


Click on "PAIR" to start the association.


← MYDS ACCOUNT CERTIFICATION
× SECURED BLUETOOTH CONNECTION
← SECURED BLUETOOTH CONNECTION
× SECURED BLUETOOTH CONNECTION

MyDS account certification process

To be able to control your vehicle remotely from your smartphone, you must complete this ten-minutes path in three steps.

You can stop it at any time and resume later.

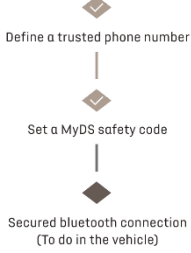







Secured bluetooth connection

Pick-up your car key, keep your phone with you, get on board and start the engine.

Make sure you are ready

-  Ensure that your smartphone is connected to the internet via Wi-Fi or cellular (3G/4G)
-  Turn on the engine, connect your smartphone to your car with bluetooth connexion.
[Connect my smartphone to my car](#)
-  Your vehicle's privacy mode (private mode) must allow data sharing.
[Handle my car data privacy](#)



Secured bluetooth connection done

START

START

CONTINUE

FINISH

Congratulations ! Remote Control service is now active: you may be asked to update your vehicle infotainment software to fully enjoy all the features and manage your car remotely.

HOW TO USE YOUR REMOTE CONTROL:

Once you have activated Remote Control for your vehicle, you can control the locking status of your car (lock and unlock the doors), turn on the headlights and the horn in few simple steps.

To remotely control your car, you just need to open MyDS app, select the icon of the command that you would like to send to your vehicle, confirm the action and wait few seconds.

Remember that every 7 days you will be asked to confirm your security code to continue using the Remote Control benefits.

